Selection Guide



1009 Pressure Gauge Tools

Overview

Section	Part Number	Description	Notes
Tools	101B220-02	2½" 1009 Nest Tool (for holding gauges)	
	101B221-02	2½" Ring Tightening Tool	
	101B220-01	3½" 1009 Nest Tool (for holding guages)	
	101B221-01	3½" Ring Tightening Tool	
	1230	Plunger Body Bolt and Plug for 1/4" NPT Throttle Plug Insertion	
	1231	Tool to insert Throttle Plug on ½" NPT	
	188A101-01	Pointer Staker	
	112A381-01	Pointer Puller Screw/Pin (For pointer Removal)	Must be purchased together
	292A133-01	Pointer Puller Body (For pointer Removal)	
3220	3220	Hand Jack Set	
1105T	1105T	Tool Kit	
1105T additional accessories	266A106-01	Pin Vise for Reamers	
	266A107-01	1105RF Reamer for Special small holes (Max Diameter .028")	
	266A107-02	1105RE Reamer for 3½" and larger gauges (Max Diameter .052")	
	266A107-03	1105RD Reamer for 4½" and larger gauges (Max Diameter .070")	
	266A107-04	1105RB Reamer for 4½" and larger gauges (Max Diameter .082")	
	266A107-05	1105RA Reamer for 4½" and larger gauges (Max Diameter .098")	
	266A109-01	1105W- Wiggler	
	266A108-01	11005TW- Tweezer	

21/2" Ring Tightening Kit



101B220-02 2½" 1009 Nest Tool (for holding gauges)



101B221-02 2½" Ring Tightening Tool

Location Flr-189

Selection Guide



1009 Pressure Gauge Tools

3½" Ring Tightening Kit



101B220-01

31/2" 1009 Nest Tool (for holding gauges)

1230



Plunger Body Bolt and Plug for 1/4 NPT Throttle Plug insertion

Location Flr-738 Bin Q08



101B221-01

31/2" Ring Tightening Tool

Location

Flr-189

1231



Tool to insert Throttle Plug on 1/2 NPT

Location: Flr-738 Bin K19

188A101-01



Pointer Staker

Location Flr-738



1009 Pressure Gauge Tools

Pointer Remover







112A381-01

Pointer Puller Screw/Pin (For pointer removal) *Purchase with 292A133-01

Location

Flr-738 Bin M24

292A133-01

Pointer Puller Body (For pointer removal) *Purchase with 112A381-01

Location

Flr-738 Bin M22

3220



1105T



Hand Jack Set

Location

Flr-738 Bin Q66

Tool Kit (Includes part numbers 3220, 266A106-01, 266A107-01 to 05, 266A109-01 & 266A108-01

Location:

Flr-738 Bin Q07

266A106-01



Pin Vise for Reamers

Location

Flr-738

266A107-01



1150RF Reamer for Special small holes (Max diameter 0.028"

Location

Flr-738



1009 Pressure Gauge Tools

266A107-02

266A107-03



1150RE Reamer for 3½" & larger gauges (Max diameter 0.052")

Location

Flr-738

1150RD Reamer for 4½" & larger gauges (Max diameter 0.070")

Location

Flr-738

266A107-03

266A107-05



1150RB Reamer for $4\frac{1}{2}$ " & larger gauges (Max diameter 0.082")

Location

Flr-738 Bin Q08

1150RB Reamer for 4½" & larger gauges (Max diameter 0.098")

Location:

Flr-738 Bin K19

266A109-01

266A108-01



1105W - Wiggler

Location

Flr-738



1105TW - Tweezer

Location

Flr-738