



Digital Test Gauge

Operating Instructions



Congratulations on your purchase of the Ashcroft® digital test gauge with total error band full-scale accuracy and the largest display readout in the industry of .66" high. Other industry-leading features include twelve selectable engineering units, seven languages, and password-protected disable and calibration functions. With the range printed on the keypad, the Ashcroft digital gauge meets the ASME B40.7 digital gauge specification.

See a complete listing of product features and specifications on pages 15 & 16.

Ashcroft Inc.
250 Main Street
Stratford, CT 06614-5145
Tel: (203) 378-8281
www.ashcroft.com

TABLE OF CONTENTS

	<i>Page</i>
Quick Reference Guide	4-5
Keypad Functions	6
• ON/OFF KEY	
• BACKLITE KEY	
• MIN/MAX KEY	
• ZERO/CLEAR KEY	
• ENTER KEY	
• CONFIG KEY	
Configurable Functions (CONFIG Mode)	
• Units (Engineering)	7
• Update Rate	7
• Auto Off	8
• Backlite	8
• Languages	8
• Damping	9
• Contrast	9
• Calibrate (Gauge Calibration)	9-11
• Zero Span	11
• Zero Disable	12
• Disable	13
Available Ranges	14
Specifications	15-16
Installation & Battery Replacement	17
• Mounting	
• Battery Replacement & Installation	

QUICK RE

.66" high display, 5 digit

Bar graph
% of full scale

Flashing display when unit
pressured below zero

Press to indicate minimum
or maximum pressure
gauge has measured
Press again to return to pressure
units

While in max or min mode,
press to clear minimum or max-
imum displayed values



UNITS (Pressure)

ENGLISH

PSI

INHG

INH2O

with Temperature

(Options: 60°F,
4°C, 20°C)

FTSW

METRIC

BAR

MBAR

KPA

MPA

mmHG

CMH2O

mmH2O

KG/CM2

UPDATE RATE

(Pressure measurement
per second)

10x*

5x

2x

1x

DAMPING

(averages gauge reading)

None*

AVG 2

AVG 4

AVG 6

AVG 8

LANGUAGE(s)

English*

French

Spanish

German

Italian

Portuguese

Dutch

BACKLITE

(Off options)

ON/OFF*

10 SEC

30 SEC

1 MIN

5 MIN

REFERENCE



Press to turn unit on or off

*Press to turn backlight
on or off*

*Flashing display when unit
pressured beyond full-scale*

*This bar graph indicates
battery level; the more
segments, the closer the
battery is to full charge*

*Range on keypad;
complies with ASME B40.7*

*While in unit of measurement mode (eg: psi), press
the ZERO CLEAR button to rezero the gauge. This
feature functions when displayed pressure is within
 $\pm 5\%$ of zero value*

AUTO OFF
(Turns unit off after
option selected)

Never*
2 minutes
5 minutes
15 minutes
30 minutes

CALIBRATE
Zero and span
adjustments,
password
protected

CONTRAST
(Customizes
display
readout)
7 available
**Selection 4 is
Default***

DISABLE
Allows for
"lockout" of
CONFIG
options

**Indicates Default*

KEYPAD FUNCTIONS



Turns the gauge on and off. When pressing the ON/OFF key while in the off position, gauge start-up display first indicates the software version followed by the model number and gauge pressure range. The gauge will then display indicated pressure and be ready for use.



Manually turns backlight on and off. (See **CONFIG** mode for options).



Allows review of minimum and maximum pressure values since unit start-up or last push of the clear button. Press key to:

- 1) Indicate maximum pressure.
- 2) Indicate minimum pressure.
- 3) Exit MAX/MIN mode and return to unit of pressure measurement mode. To clear minimum and maximum values press ZERO/CLR button.

Must be in MAX/MIN mode.

Note: MIN/MAX data is lost when unit is turned off.



Press this key prior to gauge usage to rezero any initial offset less than $\pm 5\%$ of the rated gauge range. If indicated pressure is greater than 5% of range, the rezero feature becomes inoperable. This prevents accidental tare of a pressurized gauge.

To clear minimum and maximum values, press ZERO/CLR button (when min/max values are indicated).



Used in conjunction with CONFIG key, see next page.



This key allows for customization of the gauge. Pressing the CONFIG key allows cycling through the main menu items; UNITS, UPDATE, AUTO OFF, BACKLITE, LANGUAGE, DAMPING, CONTRAST & CALIBRAT.

KEYPAD FUNCTIONS

UNITS: 12 units of measurement are available, both English and metric, by cycling through the UNITS key; psi, "Hg, "H₂O (with three temperature options, 60°F, 4°C and 20°C), ftSw, Bar, mBar, kPa, mPa, mmHg, cmH₂O, mmH₂O, kg/cm².

Step 1: Press the CONFIG key until the word UNITS appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key once to select ENGLISH or again to select METRIC.

Step 4: Press the ENTER key with selection of ENGLISH or METRIC.

Step 5: Press CONFIG key to select unit of measurement.

Step 6: Press ENTER key to finalize unit of measurement.

UPDATE: this option allows for changing the rate at which pressure is updated on the display screen. The default rate measures pressure at the maximum rate of 10* updates per second or 100 milli-seconds. Optional rates of measurement are measured in updates per second. The options are 10*, 5, 2 or 1 update of pressure measurement per second.

Since customer processes vary, update rates should be selected based on the application.

To use the UPDATE option:

Step 1: Press the CONFIG key until the word UPDATE appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key to select the desired update rate.

Step 4: Press ENTER key to finalize UPDATE rate.

AUTO OFF: this option sets the amount of time before the gauge will turn itself off after no activity. Offerings are **Never***, 2, 5, 15, or 30 minutes.

KEYPAD FUNCTIONS

To use the AUTO OFF option:

Step 1: Press the CONFIG key until the word AUTO OFF appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key to select the desired AUTO OFF rate.

Step 4: Press the ENTER key to finalize the AUTO OFF rate.

BACKLITE: 5 options are available. They include ON/OFF*, 10 seconds, 30 seconds 1 or 5 minutes. With the ON option pressed, the gauge backlite will remain lit whenever the gauge is in the ON mode or until the backlite button is pushed again. Options allow the backlite to automatically turn-off after a selected period of time. **Note:** leaving backlite button on will decrease battery life.

To use the BACKLITE option:

Step 1: Press the CONFIG key until the word BACKLITE appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key to select one of the available time options.

Step 4: Press the ENTER key to finalize your choice of BACKLITE options.

LANGUAGE: available in seven different languages, this option allows the user to change the default language in the CONFIG mode. The languages include **English***, French, Spanish, German, Italian, Portuguese and Dutch.

Step 1: Press the CONFIG key until the word LANGUAGE appears.

Step 2: Press the Enter key.

Step 3: Press the CONFIG key to select one of the available LANGUAGE options.

Step 4: Press the ENTER key to finalize your LANGUAGE option

KEYPAD FUNCTIONS

DAMPING: with six different options, this mode allows for taking process pressure readings and averaging them. This option is particularly useful when there is pulsation in the process. The options are **NONE***, AVG 2, 4, 6 or 8.

Step 1: Press the CONFIG key until the word DAMPING appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key to select one of the available DAMPING options.

Step 4: Press the ENTER key to finalize your DAMPING option.

CONTRAST: this mode allows for BACKLITE contrast level. Seven options are available, 1, 2, 3, **4***, 5, 6 and 7.

Step 1: Press the CONFIG key until the word CONTRAST appears.

Step 2: Press the ENTER key.

Step 3: Press the CONFIG key to select one of the available CONTRAST options.

Step 4: Press the ENTER key to finalize your CONTRAST selection.

Note: setting high contrast levels will decrease battery life.

CALIBRAT.:

Gauge Calibration: Both zero and span adjustments are available. This gauge has been configured with a default password of 000000. This factory password does not allow access to calibration. To access the calibration mode, it is necessary to configure a *user password*. Once the user password is configured, it will become the default password that allows access to gauge calibration.

KEYPAD FUNCTIONS

To access the factory default password:

Step 1: Press the CONFIG key until the word CALIBRAT appears.

Step 2: Press the ENTER key.

Step 3: The letters/asterisks... PW***** appear.

Step 4: Press the CONFIG key. An Ø appears in the first position.

Step 5: Press the ENTER key once.

Step 6: Press the CONFIG key until Ø appears. Ø will appear in the second position.

Step 7: Press ENTER.

Step 8: Use this format until all the asterisks are replaced with Ø.

There now should be a total of five Ø's on the keyboard display. The zero in the fifth position should be blinking.

Step 9: Press the ENTER key. You are now prompted to SET PW (or set password).

Step 10: Press the ENTER key.

Step 11: Decide on a five number user password, then follow the procedure above inserting a number in the flashing display until all five numbers are inserted.

Step 12: A SAVE prompt will then appear. If the selected user password is acceptable, press ENTER. If the selected user password is not acceptable press ZERO CLEAR to refigure the user password.

After the password is configured, the default factory password will be replaced with the user password. Once configured, the factory password is no longer accessible.

If an incorrect password is entered, the system will display WRONG. Press the CONFIG key to reenter the correct password.

Step 13: Press ENTER again to begin calibration.

Note: Calibration feature allows recalibration of zero and span.

KEYPAD FUNCTIONS

Zero Calibration:

Step 14: Press the CONFIG key once and the word CALIBRA appears. Press ENTER. (This mode allows for 0 and full- scale adjustment of span.) The gauge will now display 0.00. Ensure the gauge is not pressurized; then press ENTER to zero the gauge. Zero calibration is now complete.

Full Scale Calibration

Step 15: The gauge will now display full-scale range (e.g. 100.00 psi). Pressurize the gauge to 100% of the range (which is equal to the displayed value) utilizing a pressure standard with accuracy four times greater than the unit being calibrated? Press ENTER. Full-scale calibration is now complete.

Notes:

1. If the digital gauge under test is not pressurized while in span adjustment of full-scale range, an ERROR message will be displayed when the ENTER button is pressed. If this occurs, press the ZERO CLEAR button on the keypad to return to the previous screen.
2. ASME B40.7-1998, section 6.1.1.1 recommends the working standard for the gauge being tested is 4X better than the digital gauge under test. This means the pressure standard measuring the full-scale pressure being applied to the gauge should have an accuracy four times greater than the unit being spanned.

Zero SP (span):

This feature allows setting *the % of span in which the zero button will operate. Span is limited to prevent accidental tare of process pressures. Options are 5%, 10% or DISAB (5% is the factory default and means the unit can be rezeroed between $\pm 5\%$ of span). If DISAB is selected, the zero button is deactivated and no display change will occur when the zero button is pushed.*

KEYPAD FUNCTIONS

Step 1: Press the CONFIG key until the word ZERO SP appears.

Step 2: Press ENTER.

Step 3: Enter user five digit password (PW). This is the same password established to access the CONFIG mode in the menu.

Step 4: Press the CONFIG key to select the desired option.

Step 5: Press ENTER to finalize the selection.

Notes:

Selecting the DISAB feature does not disable the CLEAR button on the keypad for the MAX/MIN feature. If the DISAB feature is selected, pressing the ZERO button on the keypad will cause the display to read DISAB for two seconds. The gauge will then revert back to the unit of measure of the gauge. The DISAB feature disables the zero feature of the gauge.

Zero Disable Feature:

This feature allows disabling the Zero/Clear button on the keypad. It also allows for a zero tolerance of either 5% (default) or 10% of the gauge range.

Step 1: *Press the CONFIG key until the word ZERO SP appears.*

Step 2: *Press ENTER.*

Step 3: *A prompt appears to enter PW (enter password). The ZERO SP password is the same password as discussed on page 10 and the heading CALIBRAT.; Gauge Calibration. Follow the instructions on page 10 to enter a password.*

Step 4: *Press the CONFIG key to select the zero tolerance, either 5% or 10% of range, or press the CONFIG key again and the word DISAB appears. Press ENTER to select the new default setting.*

KEYPAD FUNCTIONS

If the user password is lost or stolen, contact Ashcroft Inc., customer service at (203) 378-8281 for a new factory password that will allow the user to establish a new user password.

DISABLE: allows “lockout” of *individual* CONFIG options. The default is ENABLE for all options in the CONFIG mode.

Step 1: Press the CONFIG key until the word DISABLE appears.

Step 2: Press the ENTER key.

Step 3: Insert the *user* password following the procedure as described in steps 3 through 13 above.

Note: This is the same user password as in the CALIBRAT mode.

Step 4: Press the ENTER key.

Step 5: The first option in the CONFIG menu will now be displayed (UNITS).

Step 6: To DISABLE the UNITS option press the ENTER key until the word DISABLE appears.

Step 7: Press the CONFIG key. The UNITS option is now DISABLED.

Step 8: Proceed through the balance of the CONFIG menu options by pressing the CONFIG key. Follow steps 6-8.

DIGITAL TEST GAUGE RANGES

psi (Gauge)	psi (Compound)	psi (Absolute)	bar (Gauge)	bar (Compound)
vac.	-15/+15	15	1	-1/0
5	-15/+30	25	1.6	-1/1
10	-15/+60	50	2.5	-1/2
15	-15/+100		4	-1/3
30			6	
60			10	
100			16	
160			25	
200			40	
300			60	
500			160	
600			250	
800			350	
1000				
2000				
2500				
3000				
5000				
7000				

mmH ₂ O (Gauge)	mPa (Gauge)	mBar/cmH ₂ O (Gauge)	kPa (Gauge)
3000	1	250	25
5000	1.6	300	40
10,000	2.5	400	60
	6	500	100
	16	600	160
		1000	250
		1600	400
		2000	600
		2500	1000
		4000	
		5000	
		6000	
		10,000	

SPECIFICATIONS

Type	2089 (0.05% accuracy), 2086 (0.10% accuracy), 2084 (0.25% accuracy)
Accuracy	0.05%, 0.10%, 0.25% all Full Scale Terminal Point Total Error Band (TEB) Accuracy Including Hysteresis, Linearity, Repeatability & Temperature (–18/65 °C) (0/150 °F)
Dial Size	3"
Case Material	300 Series Stainless Steel
Case Finish	Electropolished
Case Enclosure Rating	Weatherproof, IP65
Socket Material	316 Stainless Steel
Socket Size	¼ NPT Male (others on application)
Connection Location	Lower, 3:00, 9:00, Top
Ranges	Vac thru 7000 psi (see engineering units below for other units of measurement)
Operating Temperature	0/150 °F
Storage Temperature	–40/180 °F
DISPLAY:	
Type	LCD
Display Digits	5
Character Height	.66"
Backlit	Off By Default
Bar Graph	Yes
Battery Life	1000 Hrs.
Agency Approvals	FM (FMapproval not available on straight vacuum range and not available on compound ranges up to and including -15/+30 psi or equivalent.)
KEYPAD FUNCTIONS:	
On/Off	Manually Turns Unit On & Off (auto off options in config menu)
Backlit	Manually Turns Backlit On & Off (auto off options in config menu)
Min/Max	Stores Min & Max Values
Zero/Clear	Zeros Display or Clears Min/Max Values When Displayed
Enter	Selects Items In CONFIG Menu

SPECIFICATIONS

Config Mode

Allows Scrolling Through CONFIG Menus

Engineering Units

Psi, $^{\circ}\text{Hg}$, $^{\circ}\text{H}_2\text{O}$ (with three temperature options, 60 $^{\circ}\text{F}$, 4 $^{\circ}\text{C}$ and 20 $^{\circ}\text{C}$), ft.SW, bar, mbar, kPa, mPa, mmHg, cmH₂O, mmH₂O, kg/cm²

Update Rate

4 Options: 10x/sec, 5x/sec, 2x/sec, 1x/sec

Auto Off

6 Options: Never, 2 Min., 5 Min., 15 Min., 30 Min.,

Dampening

6 Options: None, Average 2, 4, 6, 8 x update rate

Languages

7 Languages: English, Spanish, French, Italian, German, Portuguese, Dutch

Backlite

5 Options: On/Off, 10 Sec., 30 Sec., 5 Min., 15 Min.

Field Recalibration

Zero & Span (password protected)

Contrast

7 Available Options

Disable Config Options

Allows disabling of Config Options (password protected)

Calibration Chart

10 Point Individual Traceable Calibration Chart, Standard, Model 2089 only, optional on 2084 & 2086

Standard Accessories

300 Series SS Protective Cover
Nylon Protective Carrying Pouch

WARNING AND ERROR MESSAGES

Display	Description
Flashing 0% or 100%	Gauge over/underpressured beyond 105% of range
LOW BAT	Low battery, replace
ERROR	Internal error, call customer service (203) 378-8281
RES ERROR	Pressure unit conversion exceeds display resolution or gauge pressured beyond resolution


Gauge Installation:

Pipe Mount – The Ashcroft digital test gauge comes standard with a ¼ NPT connection. Good piping practices recommend using teflon tape or a pipe sealant on the gauge threads. Utilize a 7/16" wrench on the wrench flat of the gauge to tighten the gauge to the process.

NEVER TIGHTEN GAUGE THREADS BY HOLDING THE BODY OF THE GAUGE. DOING SO MAY DAMAGE THE GAUGE AND MAKE THE GAUGE INOPERABLE.

Panel Mount – The lower connected Ashcroft digital test gauge is available with an optional flange for panel mounting. Please refer to illustration and dimensions below.

Battery Installation and Replacement:

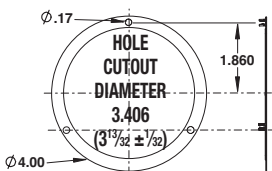

The gauge comes standard with three AAA alkaline batteries installed. For battery replacement use only one of the three types listed below:

- Energizer AAA alkaline, E92 LR03 AM4 1.5V
- Energizer AAA alkaline, EN92 LR03 AM4 1.5V
- Duracell AAA alkaline, MN2400 LR03 1.5V

Do not mix ages or brands of batteries. Do not replace batteries in hazardous areas.

Batteries have a life of approximately 1000 hours. Battery life is dependent on gauge usage, backlite settings and power off settings. When the display flashes LOW BAT, batteries should be replaced.

To replace the batteries:

- 1) Remove the single screw on the back of the gauge case.
- 2) Hold the keypad in the palm of hand.
- 3) Carefully remove the three batteries from the holder and replace the batteries. Use only AAA alkaline non-rechargeable batteries.



Pipe to which gauge is attached must be properly grounded.

Ashcroft Inc.
250 Main Street
Stratford, CT 06614-5145
Tel: (203) 378-8281