

A2 PRESSURE TRANSMITTER INSTRUCTION SHEET



⚠️ WARNING! READ ⚠️ BEFORE INSTALLATION

1. GENERAL:

A failure resulting in **injury** or **damage** may be caused by excessive overpressure, excessive vibration or pressure pulsation, excessive instrument temperature, corrosion of the pressure containing parts, or other misuse. Consult Ashcroft Inc., Stratford, Connecticut, USA before installing if there are any questions or concerns.

2. OVERPRESSURE:

Pressure spikes in excess of the rated overpressure capability of the transducer may cause **irreversible electrical and/or mechanical damage** to the pressure measuring and containing elements.

Fluid hammer and surges can destroy any pressure transducer and must always be avoided. A pressure snubber should be installed to eliminate the damaging hammer effects. Fluid hammer occurs when a liquid flow is suddenly stopped, as with quick closing solenoid valves. Surges occur when flow is suddenly begun, as when a pump is turned on at full power or a valve is quickly opened.

Liquid surges are particularly damaging to pressure transducers if the pipe is originally empty. To avoid damaging surges, fluid lines should remain full (if possible), pumps should be brought up to power slowly, and valves opened slowly. To avoid damage from both fluid hammer and surges, a surge chamber should be installed.

Symptoms of fluid hammer and surge's damaging effects:

- Pressure transducer exhibits an output at zero pressure (large zero offset).
- Pressure transducer output remains constant regardless of pressure
- In severe cases, there will be no output.

FREEZING:

Prohibit freezing of media in pressure port. Unit should be drained (mount in vertical position with electrical termination upward) to prevent possible overpressure damage from frozen media.

3. STATIC ELECTRICAL CHARGES:

Any electrical device may be susceptible to damage when exposed to static electrical charges. To avoid damage to the transducer observe the following:

- Operator/installer should follow the proper ESD (electrostatic discharge) protection procedures before handling the pressure transducer.
- Ground the body of the transducer

BEFORE making any electrical connections

- When disconnecting, remove the ground LAST!

Note: The shield and drain wire in the cable (if supplied) is not connected to the transducer body, and is not a suitable ground.

4. USE IN LIFE SUPPORT DEVICES


Ashcroft Inc. products are not authorized for use as critical components in life support devices or systems without the express written approval of the General Manager, Stratford Operations of Ashcroft Inc. As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Ashcroft® A2 Pressure Transmitter, Typical Dimensions and Construction*


Enclosure Options "S" and "Z"

Threaded housing with zero & span access

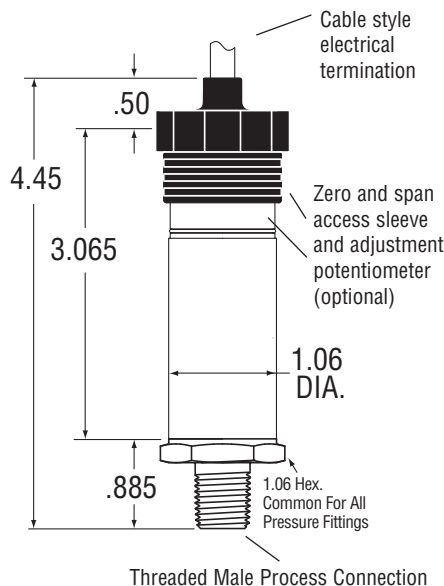

Enclosure Option "W"

Welded housing without zero and span access

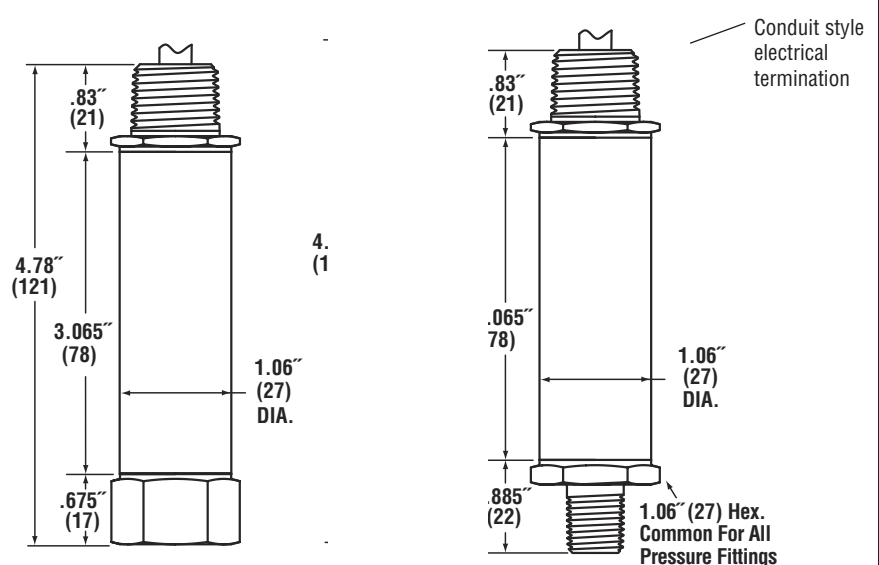

*Dimensions and construction details may vary based on product specified.

A2 PRESSURE TRANSMITTER INSTRUCTION SHEET



Mounting

The A2 transmitter requires no special mounting hardware, and can be mounted in any plane with negligible position error.

Although the unit can withstand normal vibration without damage or significant output effects, it is always good practice to mount the transducer where there is minimum vibration.


For units with NPT type pressure fittings apply Teflon® tape or an equivalent sealant to the threads before installing.

When tightening, apply a wrench to the hex wrench flats located just above the pressure fitting. **DO NOT** tighten by using a pipe wrench on the housing.

Power Supply

| Output Signal | Power Supply Voltage | |
|-------------------------------|----------------------|------|
| | Min | Max |
| Ratiometric (0.5V to 4.5V) | 4.5V | 5.5V |
| 0-5Vdc | 10V | 30V |
| 1-5Vdc | 10V | 30V |
| 1-6Vdc | 10V | 30V |
| 0-10V | 14V | 30V |
| 4-20mA | 12V* | 36V |

* For transmitters with 4-20mA output signal, the minimum voltage at the terminals is 12Vdc. However, the minimum supply voltage should be calculated using the following graph and formula.

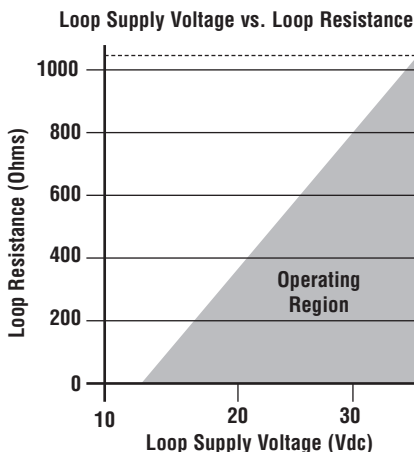

$$V_{min} = 12V + (.022A \times RL) \text{ (includes a 10\% safety factor)}$$

$$RL = RS + RW$$

RL = Loop Resistance (ohms)
RS = Sense Resistance (ohms)
RW = Wire Resistance (ohms)

Noise

For minimum noise susceptibility, avoid running the transducer's cable in a conduit that contains high current AC power cables. Where possible avoid running the cable near inductive equipment.



Shielded Cable

Units with shielded cable electrical termination, connect the drain wire to the guard terminal on the read out device or measuring instrument, if available. In all other cases connect to the ground or to the power supply negative terminal.

Vent Tube (Cable Termination Only)

The cable has a clear Teflon® vent tube required at pressure ranges below 500 psi to provide atmospheric reference. The open end should be placed in a dry area.

A2 Wiring Diagrams

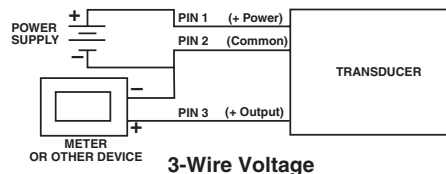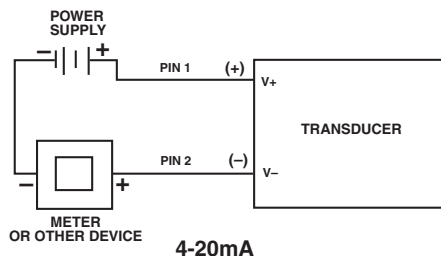

A2 transducer has internal transient protection: for safety, limit line-to-ground voltage to 36 Vdc max.

Zero and Span Adjustment

Instructions below apply to the particular configurations noted, not all A2 configurations offer Zero and Span access. While Zero adjustment is not normally necessary, it may be desirable to trim out any offset in the system. However, proper Span calibration requires a pressure standard three to five times more accurate than the accuracy of the transducer, and there may also be interaction of Span on Zero.


1. Side access zero and span adjustment (Enclosure Options "Z," "Y") A2 configurations with side access "Z" and "S" potentiometers (pots) have a black plastic access sleeve towards the elec-

trical termination end of the unit (see diagram on front page).

To gain access to the zero and span adjustment pots, slide the access sleeve upward toward the connector. On the label there is a "Z" and "S" to indicate zero and span. (Looking at the A2 vertically as in the diagram, zero is on the left and the span is on the right). Using a small trim pot adjustment tool you can adjust zero +/- 10% of full scale and span +/-10% of full scale.

2. Top/rear access zero and span adjustment

Access to "Z" and "S" pots via the top (electrical termination end) of the unit is standard on all "S" enclosure units with 4-20mA output. Access is gained by removing the black threaded cap, once removed you will see the pots indicated by "Z" and "S"

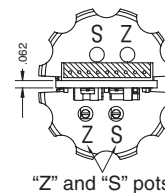

respectively as shown below. Using a small trim pot tool, you can adjust zero ±10% of full scale and span ±10% of full scale.

Recalibration Instructions:




1. Apply 0% full scale pressure.
2. Adjust the output using the zero adjust trim pot.
3. Apply 100% full scale pressure.
4. Adjust the output using the span adjustment trim pot.
5. Repeat steps 1 through 4 as necessary.

A2 PRESSURE TRANSMITTER INSTRUCTION SHEET




| Pin # | Voltage Output | Current Output |
|-------|----------------|----------------|
| A | (+) Power | (+) Power |
| B | (+) Output | None |
| C | Field Gnd. | Field Gnd. |
| D | (-) Power | (-) Power |

| Wire Color | Voltage Output | Current Output |
|------------|----------------|----------------|
| Red | (+) Power | (+) Power |
| White | (+) Output | None |
| Black | (-) Power | (-) Power |
| Green | Field Gnd. | Field Gnd. |
| Bare | Drain Wire | Drain Wire |

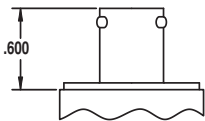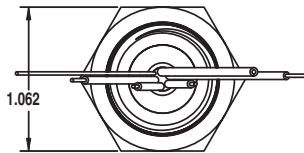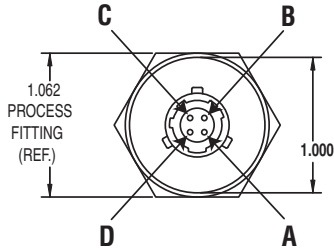

(4) PIN BENDIX STYLE
ELECTRICAL TERMINATION
SHELL SIZE 8
(B4), (H1), (L1), (P2)

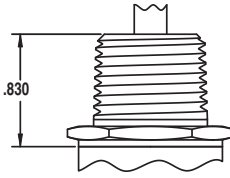

PIGTAIL
ELECTRICAL TERMINATION
CONDUIT - 1/2 NPT MALE
(C1), (P7)






ELECTRICAL TERMINATIONS FOR

| Pin No. | Voltage Output | Current Output | Mating Cable Color |
|---------|----------------|----------------|--------------------|
| 1 | (+) Power | (+) Power | Red |
| 2 | (+) Output | None | White |
| 3 | Field Gnd. | Field Gnd. | Green |
| 4 | (-) Power | (-) Power | Black |


| Pin No. | Voltage Output | Current Output | Mating Cable Color |
|---------|----------------|----------------|--------------------|
| 1 | (+) Power | (+) Power | Red |
| 2 | (-) Output | (-) Power | Black |
| 3 | (+) Power | None | White |
| GND | Field Gnd. | Field Gnd. | Green |

| Pin No. | Voltage Output | Current Output | Mating Cable Color |
|---------|----------------|----------------|--------------------|
| A | (+) Power | (+) Power | Red |
| B | (+) Output | None | White |
| C | Field Gnd. | Field Gnd. | Green |
| D | (-) Power | (-) Power | Black |


| Wire Color | Voltage Output | Current Output |
|------------|----------------|----------------|
| Red | (+) Power | (+) Power |
| White | (+) Output | None |
| Black | (-) Power | (-) Power |
| Green | Field Gnd. | Field Gnd. |
| Bare | Drain Wire | Drain Wire |

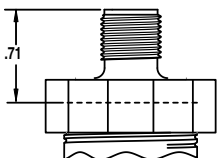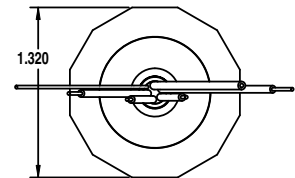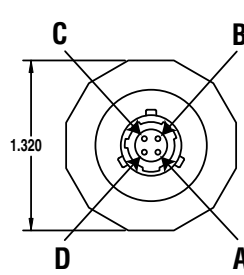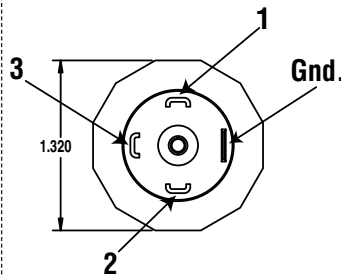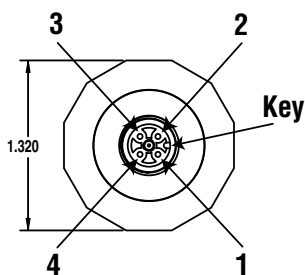


M12
ELECTRICAL TERMINATION
(EW), (E0), (E1), (E2)

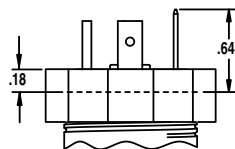

DIN 43650-A
ELECTRICAL TERMINATION
(DN), (D0), (D1), (D2)

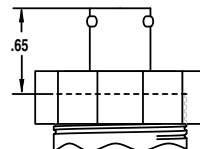

(4) PIN BENDIX STYLE
ELECTRICAL TERMINATION
SHELL SIZE 8

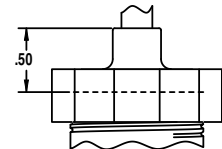

PIGTAIL
ELECTRICAL TERMINATION
PLASTIC MOLDED